

## **SURVIVAL CRAFT INTERNAL LIGHT TYPE "RESCUE-DAN R.INT1"**

### **Operation, Maintenance & Service Instructions**

#### **Operation**

Pull the activation pin out of the socket and the light will illuminate.

In case of an inflatable life raft the light is provided with a cord attached to the pin, so the pin automatically during inflation will be pulled away from the light.

#### **Maintenance**

The power source is maintenance free lithium battery with a shelf life of min. 5 years.

The complete light can only be replaced as one unit.

The expiry (replacement) date is indicated on the label by month and year.

#### **Service intervals**

It is recommended to activate the light approx. 1 minute during the raft service.

The light can be turned off during service by using the spare pin.

Inspect the light for deterioration and replace it found faulty.

#### **Safety Precautions**

- Do not dismantle the light assembly.
- Do not make any external electrical connections.
- Do not recharge.
- Do not incinerate.
- Store between -30°C to +65°C